

# LBW-50 to IO-RAL-HU Wiring diagram

**LBW-50 to Remote Alarm Wiring**

